
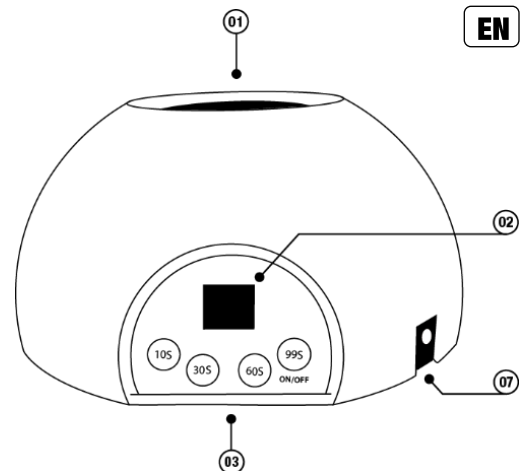


LED EXTREME PARTY UV LED

MANUAL GUIDE

PLEASE READ ALL THE SAFETY INSTRUCTIONS BEFORE THE DEVICE OPERATION. KEEP THIS MANUAL GUIDE SAFE FOR FUTURE REFERENCE.

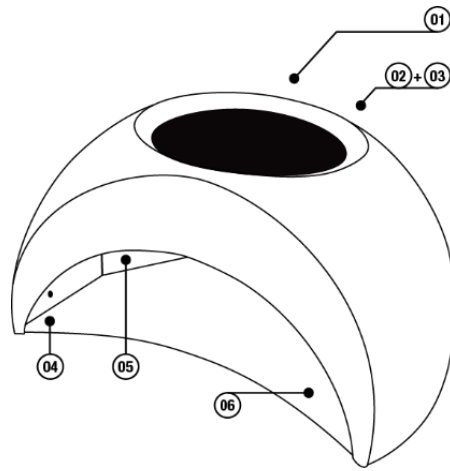

EN

PRODUCT INTRODUCTION

A LEDEXTREME PARTY UVLED Lamp is used for the UV- and UVLED light curing artificial nail materials consolidation. With its exceptional high performance music speaker, wireless Bluetooth connection and small size it will be a real jewel in your desk. Behind the large volume there is a large knowledge as well: high power 21pcs built in UVLED bulb with optimal lighting and double light-wave emitting to cure all your nail materials easily. The 36W large power and the inner mirror surface increase the materials even curing efficiency. For the easier maintenance the device Bottom plate has a magnetic fixing, what is not negligible from pedicure purpose either. The device is also provided with Motion sensor On/Off switch, Touch sensor control buttons and Digital display for the fast and efficient high level professional work.

SPECIFICATION:

- UV classification: UV Type 3 [365+405nm]
- Input: AC 100-240V~; 50/60Hz; 0.8A
- Output: DC 24V~; 1.0A
- Power: 36W±10%
- Measure: 147*185*87mm
- Weight: 538g±10%

ACCESSORIES:

- 1pc AC Adapter

PARTS OF THE DEVICE (see at pictures):

- 01** Music speaker with security grid.
- 02** Digital display.
- 03** Timer- and Control buttons (10/30/60/99S - ON/OFF).
- 04** Motion sensor.
- 05** Built in UVLED bulbs (21pcs).
- 06** Magnetic bottom plate.
- 07** AC Adapter socket.

OPERATION

ATTENTION! Before the device operation, always check the device and its accessories just state.

Pay attention not to touch the device UVLED bulbs with anything during in use. [e.g.: skin, nails- or other professional items/accessories/materials].

[01.] Unpack the device and its accessories from the packaging then select a stable, horizontal, even surfaced place for the device use.

[02.] The device is suitable for hand-/feet and without customer use. If it requires, remove the device Bottom plate (see at pic. **06**), as following:

- Hold the device stable via its top part where the hand opening is found. After, remove the bottom plate with a downward pulling move. Place the device to an even surfaced place.
- For the Bottom plate reinstall, turn the device upside down than place back the panel to the device bottom. If it necessary rearrange the plate position with small moves for the better fit. **Notice:** The Bottom plate rubber stands should face outwards from the device inside.

[03.] Connect the device AC Adapter to the outlet, than to the device socket (see at pic. **07**). During the device install the device Digital display (see at pic. **02**), Music speaker (see at pic. **01**), and Bluetooth connection will start to operate automatically. **Notice:** The device ready to use-/switch on state will be indicated by the Digital display switch on and the Music speaker short sound notice.

[04.] Select the desired operation mode as following:

- Default setting:** After the device install, the device will run on 30S (3sec) timed use automatically without the Control buttons touch (see at pic. **02**). About the operation start see more at the **Use with motion sensor** chapter below.
- Use with motion sensor: 10S, 30S, 60S (10/30/60mp) timed use.**
Select the desired operation time with the Timer buttons short press at the device back (see at pic. **03**). The selected operation time will be indicated in the Digital display (see at pic. **02**). For the operation start place the hand-/feet or at least 1.5cm tall, non-transparent item between the Motion sensors range (see at pic. **04**). For the operation stop remove the hand-/feet or item from the Motion sensors range. After every operation stop, the previously adjusted operation time will run from the start. For the device restart place in the hand-/feet or item between the Motion sensors range (see at pic. **04**). **Notice:** after the operation time end the device will turn off automatically without a sound indication and will remain in stand by state.
- Use without motion sensor: 99S - ON/OFF continues timed use.**
With the 99S - ON/OFF Timer button short press (see at pic. **03**), the device will turn on automatically and will operate in continues mode till the end of the 99sec or till the operation break. The 99sec operation time will be indicated in the Digital display (see at pic. **02**). With this operation mode use the Motion sensors will be out of operation (see at pic. **04**). Therefore the hand-/feet or item can be removed and replaced in the device without operation break. At the end of the operation time end the device will turn off automatically without a sound indication and will remain in stand by state. For the operation restart or break, press the 99S - ON/OFF timer button again. **Notice:** After every operation break, the operation time will run from the start again.

Notice: The operation times and modes can be changed during operation as well.

Attention! If the device becomes too heated up during in use, discontinue the device use for at least 15min. If the applied material causes burning sensation on the nails (it depends on the material and the person sensitivity) than use the device with breaks or temporarily discontinue the device use.

[05.] After the device use finished turn it off and anneal it as following:

- Turn off the device according to the actual mode use as it described in the **[04.]** chapter.
- Than remove the AC Adapter from the device back (see at pic. **07**), than from the outlet as well.

MUSIC/SOUND PLAY AND BLUETOOTH USE: During the device install the Music speaker (see at pic. **01**) and the Bluetooth connection will start to run automatically and will remain in active state till the device use. The turn on active state will be indicated by the Music speaker short sound notice (see at pic. **01**). **Notice:** The Music speaker use do not has an effect on the device UVLED lamp function. The music- or sound play can be controlled by mobile phone or other devices what has Bluetooth connection (e.g.: computer, laptop etc.). Turn on the Bluetooth connection on your device, than search for the Bluetooth active devices (if its not an automatic function). The device name will appear on your device shortly: **LEDEXTREME Party Lamp**. Connect the devices, than select the desired file you would like to play. The sound volume- and other play related adjustments will be controlled by your device. If you require the device name can be changed to your liking. **Attention! More than one device Music speaker cannot be operated by the same device. As well as the lamp cannot be connected with more than one control device.** In case of mobile phone use the device will automatically pause the sound play during in receiving calls or notices. The sound play will automatically start again after the call or notice end. If the device music speaker is not used anymore, disconnect the devices Bluetooth connection in your device Bluetooth settings or turn off your device Bluetooth function. The disconnection will be indicated by the device two short sound notice. For the Music speaker turn on reconnect the devices as described above.

CLEANING/MAINTENANCE

ATTENTION! Before the cleaning/maintenance always make sure the device annealed state [see at OPERATION [05.] chapter]. **Only proceed with the cleaning/maintenance after the device- and the UVLED bulbs full cool down.**

Pay attention to do not touch the device UVLED bulbs with anything during the process [e.g.: skin, nails- or other professional items/accessories/materials]. It is recommended to wear gloves during in the procedure.

Tools for the cleaning/maintenance: compressed air, brush and a non-synthetic soft, clean dry cloth.

Place the device into a stable, even surfaced place [it is recommended to put a soft cloth under the device]. Turn the device upside down, then remove its Bottom plate according to the OPERATION [02.] chapter described. Wipe out the removed Bottom plate and the device inner-and external surface with the dry, soft cloth. For the inner mirror surface and the Music speaker (see at pic. **01**) hard to reach parts cleaning, use brush and compressed air. Wipe out again the device inner- and external surface with the soft, dry cloth, than place back the Bottom plate to its place according to the OPERATION [02.] chapter described. For the last step check the device correct operation according to the OPERATION [03.] - [04.] chapters described.

Notice: In case of tenacious contamination, the device external- and Bottom panel (see at pic. **06**), can be cleaned with soft, moist cloth, but pay attention, liquids cannot be contacted with the device inner parts or joints, openings or can be contacted with the device Music speaker, Motion sensor, UVLED bulbs or its AC Adapter socket (see at pic. **01 04 05 07**). Otherwise it can cause damage to the device. At first place the cleaning material into the cloth, than start the surface cleaning. After the moist cleaning, do not put the device under in charge for at least 1-2min and always wait for its full dry. Do not use solvent detergents! **In case of average frequency use, clean the device- and its accessories according to the described above at least once a week.**

STORAGE

Store the device and its accessories always in a dry place, far from radiant heat in a clean state. Wind the AC Adapter cord loosely together while pay attention not to break it. **Before the device operation always check the device and its accessories just state.**

SAFETY CAUTIONS

- The device and its accessories are only for indoor use, between 0-40°C [32-104°F].
- The device cannot be used by individuals under age 18.
- Before the device operation always check the device and its accessories just state. Operate the device only with its original accessories.
- The device cannot be left without supervision when it is turned on, and children's cannot be present during the device operation.
- Use/store the device only in stable, even surfaced places. Do not put the device into places where it can be knocked down or may fall off or unauthorized persons can reach it.
- Do not move or lift the device by its Bottom panel (see at pic. **06**). Always hold the device stable with both hands.

- The device or its accessories cannot become contact with liquids.
- Do not ever touch the device- or its accessories with wet/moist hands, even if the device is turned off or in annealed state.
- Do not ever operate the device if any parts of it damaged or had any kind of accident or fell into water! Take the device into the place of purchase and ask for professional help.
- Only authorized personals can repair the device- or its accessories.
- Use/store the device only in dry places far from radiant heat, in a clean environment. Avoid moist/wet and contaminated places.
- Do not touch the device UVLED bulbs with anything (see at pic. **05**) e.g.: skin, nails or other professional items/accessories/materials or water/cleaning supplies. Otherwise the UVLED bulbs may suffer damage what will cause decline to their performance and will reduce the device lifetime.

- Do not ever look directly into the device light source during in operation (see at pic. **05**), as well as do not let the skin to be exposed excessive amount UV radiation. Otherwise it may cause eye- or skin damage or can suffer premature skin aging.
- Some drugs- and cosmetics can increase the sensitivity to the UV radiation. Before the device use remove all cosmetics from the skin surface and make sure do not take- or use any product or medication what can cause- or increase the UV radiation sensitivity.
- Do not use the device on individuals whom has highly sensitive skin- or has freckle tendencies or suffered from skin cancer before.
- The device and its accessories may have electric charges in them even when they turned off. After the device use is finished, always anneal it according to the OPERATION [05.] chapter.

For more information about the device visit our website: <http://www.crystallnails.com> or look for the place of purchase.

NOTICE

If any case of malfunction was found or any parts of the device has to be replaced/repared, please look for the place of purchase.

ELITE COSMETIX LTD.; Jozsef Krt. 44., H-1085 Budapest, Hungary

[EN] LEDEXTREME PARTY UVLED LAMP [HU] LEDEXTREME PARTY UVLED LÁMPA [RO] LAMPĂ UVLED LEDEXTREME PARTY [DE] LEDEXTREME PARTY UVLED LAMPE [FR] LAMPE UVLED LEDEXTREME PARTY [IT] LAMPADA UVLED LEDEXTREME PARTY [ES] LAMPARA UVLED LEDEXTREME PARTY