

CRYSTAL DUST COLLECTOR MOBILE

"SILVER" "GOLD" "PINK" and "ASYMMETRIC"

- Hand-Rest Type -

MANUAL GUIDE

PLEASE READ ALL THE SAFETY INSTRUCTIONS THOUGHTFULLY BEFORE THE DEVICE OPERATION. KEEP THIS MANUAL GUIDE SAFE FOR FUTURE REFERENCE.

The CRYSTAL DUST COLLECTOR MOBILE all color- and shape variations ("SILVER" "GOLD" "PINK" and "ASYMMETRIC") has the same operation-, cleaning/maintenance and safety instructions.

Product introduction:

The CRYSTAL DUST COLLECTOR MOBILE "SILVER" "GOLD" "PINK" and "ASYMMETRIC" devices are used for the emerging dust- and contaminations continues absorbing from the nail sculpting- and the manicure procedures. The devices are provided with an exclusive and youthful, easy to clean, cushioned leather surface design and a thick dust bag with filter for the high quality professional work.

CRYSTAL DUST COLLECTOR MOBILE "SILVER" "GOLD" and "PINK"		CRYSTAL DUST COLLECTOR MOBILE "ASYMMETRIC"		AC ADAPTER:
Voltage: DC 12V~	Power: 12W±10%	max. Air Flow: 183.8 m3/h	Noise level: 44.5dBA	Input: AC 100-240V~, 50/60Hz
max. Air Flow: 183.8 m3/h	Noise level: 44.5dBA	Weight: 1129g±10%	Measure: 295*140*300mm	Output: DC 12V~, 1.0A
Weight: 1111g±10%	Measure: 305*148*295mm			ACCESSORIES:
				- 1pc AC Adapter
				- 1pc Dust Bag with Filter

OPERATION

ATTENTION! Before the device operation, always check the device and its accessories just state.

- Unpack the device and its accessories from the packaging then select a stable-, horizontal-, even surfaced place for the device use.
- Connect the device AC Adapter to the outlet than into the device adapter socket on its side. If it requires adjust the power cord place, so it will not disturb you during in work.
- Turn on the device whit the On/Off switcher at the bottom fan opening neck. **ATTENTION!** Pay attention not to lean close or let any body part or object above the device fan opening during the switch on.
- Place the hand or tool above the fan opening, than you can start the work. **ATTENTION!** Pay attention do not let any kind of irrelevant object thought the device fan opening (nails, nail form, file...etc.)!
- For the device stop during in use, turn it off whit the On/Off switcher at the bottom of the fan opening neck. Wait for the fan full stop. For the restart, turn on the device whit the On/Off switcher at the bottom of the fan opening neck. **ATTENTION!** The device will remain under in charge during the turn off state, pay attention not to lean close or let any body part or object above the device fan opening during the device stop and restart.
- After the device use is finished, turn off the device than anneal it as following:**
 - Turn off the device whit the On/Off switcher at the bottom of the fan opening neck.
 - Wait for the fan full stop.
 - Remove the AC Adapter from the device adapter socket than from the outlet as well.

CLEANING/MAINTENANCE

ATTENTION! Do not disassemble the device! Before the cleaning/maintenance always turn it off and anneal the device (see at the **OPERATION 6.** chapter), as well as wait for the fan full stop. It is recommended to wear gloves and dust mask during the process.

Tools for the cleaning/maintenance: compressed air, soft brush and a non-synthetic clean, dry soft cloth.

DEVICE: Place the device into an even surfaced, stable place (it is recommended to put a cloth under the device). Remove the dust bag with the filter from the fan opening bottom (see at **DUST BAG AND FILTER** chapter). Wipe out the device external surface with soft dry cloth, than clean the fan blades trough the security grid with the brush and the compressed air. Turn the device upside down than clean the fan blades again trough the security grid with brush and the compressed air. For the hard to reach parts cleaning (adapter socket, joints, switcher) use compressed air and brush. Wipe out the device external surface with soft, dry cloth, than place back the clean, fully dry dust bag with the filter to the exhaust vent opening (see at **DUST BAG AND FILTER** chapter).

For the last step, check the device correct operation (see at **OPERATION 1 – 5.** chapters).

NOTICE: If it necessary the device external surface can be cleaned with a lightly moist, soft cloth, but pay attention the device cannot have any liquid inside in it or in its openings or socket, as well as cannot be contacted with the device AC Adapter. At first place the cleaning material to the cloth, than start the surface cleaning. After the moist cleaning, always wait for the device full dry as well as do not put it under it charge at least 1-2 min.! Do not use solvent detergents!

ACCESSORIES: Remove the AC Adapter from the device, than clean it with brush and compressed air. Pay high priority of the pin and the joints.

DUST BAG AND FILTER: Place the device an even surfaced, stable place (it is recommended to put a cloth under the device). Carefully, loosen up the dust bag- and the filter elastic neck, than remove them from the fan opening with care. Hold the dust bag- and the filter with their neck and support them below. Take the dust bag and the filter to a suitable garbage bin, than turn them upside down and discharge all the dust and contamination from it. Turn inside out the dust bag with the filter than remove the filter from the dust bag. Remove the remaining dust and contamination with a little shake, than wash out the dust bag and the filter with hand in lukewarm, lightly detergent water. After the wet cleaning, wait for the dust bag and the filter full dry, only after place them back to the exhaust vent opening as following: Turn the device upside down. Turn back the inside out dust bag and filter to their original form. Place back the filter to the dust bag than adjust the filter to the bag. Pay attention that their elastic neck to be in line with each other. Stretch out both elastic neck to a bit larger size than the exhaust vent opening, than carefully place back the dust bag and the filter till the opening end. **NOTICE:** Pay attention that the dust bag and the filter fully cover the exhaust vent, as well as pay attention not to cover up the On/Off switcher at the side of the exhaust vent. Turn back the device to its original position, than readjust the dust bag position between the device foot and the exhaust vent opening.

Only discharging the dust itself is not enough for the dust bag- and the filter cleaning. Wash out the dust bag- and the filter after every emptying according to the described above. Use the device only with clean, fully dry dust bag and filter!

If you notice lower capacity during in use or the device has less draught, check the dust bag saturation and if it is requires clean out according to the described above (see **DUST BAG AND FILTER** chapter).

In case of average frequency use, check the dust bag saturation at least once a week and if it is requires clean out according to the described above (see **DUST BAG AND FILTER** chapter).

In case of average frequency use, clean the device and its accessories according to the described above at least once a week.

For future information about the device cleaning/maintenance visit our site: <http://www.nails.tv> or if it requires look for the place of purchase.

STORAGE

Always store the device and its accessories in a dry place, far from radiant heat in a clean state. Wind the AC Adapter cord loosely together while pay attention not to break it.

Before the device installation always check the device and its accessories just state.

SAFETY CAUTIONS

- The device- and is accessories are only for indoor use, between 0~40°C [32~104°F]!
- Before the device operation always make sure the device- and its accessories just state.
- The device cannot be left behind without supervision when it is turned on.
- Use/store the device only in stable, even surfaced places. Do not put the device into places where it can be knocked down or may fall off and unauthorized persons can reach it.
- The device cannot have any liquid inside in it or in its switcher, openings or sockets as well as cannot become contacted with its AC Adapter as well.
- Do not ever touch the device- or its accessories with wet/moist hands, even if the device is turned off or it is in an annealed state.
- Do not ever operate the device if any part of it are damaged- or had any kind of accident or fell into water! Take the device into the place of purchase for repair and seek for professional help.
- Only authorized personals can repair the device- and its accessories.
- Do not allow any kind of irrelevant object thought the device openings, socket as well as to its exhaust vent (e.g.: nails, nail form, file...etc.)!
- Use/store the device in a dry place far from radiant heat, in a clean environment. Avoid moist/wet and contaminated places.
- The device and its parts may have electric charges in them even when it is turned off. After the device use is finished, always turn off and anneal the device according to the **OPERATION 6.** chapter.

For more information about the device, visit our website: <http://www.crystalnails.com> or look for the place of purchase.

NOTICE!

If any malfunction was found or any parts- or accessories of the device has to be replaced/repared, please look for the place of purchase.

ELITE COSMETIX LTD., Jozsef Krt. 44., H-1085 Budapest, Hungary