

XTREME STRONG DUST COLLECTOR

MANUAL GUIDE

PLEASE READ ALL THE SAFETY INSTRUCTIONS BEFORE THE DEVICE OPERATION. KEEP THIS MANUAL GUIDE SAFE FOR FUTURE REFERENCE.

PRODUCT INTRODUCTION


The XTREME STRONG Dust collector is used for the emerging dust/contaminations continues absorbing from the nail sculpting- and manicure procedures. The device is provided with large power, speed control switch, compact, small body with an easy to clean plastic surface and cushioned hand rest for the high quality professional work.


SPECIFICATIONS

- Input: AC 220-240V, 50Hz
- Amperage (A): 0.08A
- Power (W): 20W±10%
- Weight (g): 1378g±10%
- Measure (mm): 285*190*130mm

ACCESSORIES: 2pcs Dust Bag

XTREME STRONG DUST COLLECTOR PARTS:

- [01.] XTREME STRONG Dust collector with cushioned hand rest.
- [02.] Speed Control switcher.
- [03.] Exhaust vent with fan.
- [04.] On/Off (I/O) switcher. 
- [05.] Power cord.

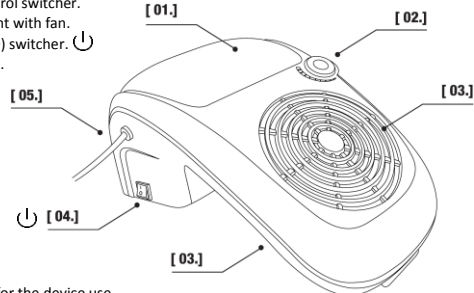

OPERATION

ATTENTION! Before the device operation, always check the device- and its accessories just state.

- [1.] Unpack the device and its accessories from the packaging then select a stable-, horizontal-, even surfaced place for the device use.
- [2.] Place the dust bags at the bottom of the device exhaust vent (see at **CLEANING/MAINTENANCE, DUST BAG**). **NOTICE:** For the maximum effect it is recommended to use both dust bag during the device use.
- [3.] Connect the device Power cord to the outlet (see at **Fig [05.]**). **ATTENTION!** Pay attention not to lean above- or let any kind of object in front of the device exhaust vent (see at **Fig [03.]**).
- [4.] Turn on the device with the I/O (On/Off) switcher at the side of the device (see at **Fig [04.]**), then adjust the desired suction speed with the Speed Control switcher (see at **Fig [02.]**).
- [5.] Place the hand- or the desired object above the exhaust vent opening (see at **Fig [03.]**) now you can start working with the device. **ATTENTION!** DO NOT let any kind of object thought the exhaust vent opening (e.g.: nails, nail form, file...etc.)!
- [6.] For the device stop during in operation, set the Speed Control switcher (see at **Fig [02.]**) to the lowest stage until it clicks. To restart the operation, turn the device Speed Control switcher (see at **Fig [02.]**) in the reverse direction till the desired speed. **ATTENTION!** During the procedure the device will remain under in charge! Pay attention not to lean above- or let any kind of object in front of the device exhaust vent (see at **Fig [03.]**).
- [7.] **After the device use is finished, turn off the device than anneal it as following:**
 - Set the Speed Control switcher (see at **Fig [02.]**) to the lowest stage until it clicks.
 - Turn off the device with the I/O (On/Off) switcher at the side of the device (see at **Fig [04.]**).
 - Remove the device Power cord (see at **Fig [05.]**) from the outlet.

CLEANING/MAINTENANCE

ATTENTION! Do not dissemble the device! Before the cleaning/maintenance always turn off the device and anneal it (see at **OPERATION [7.]** chapter) as well as wait for the fan full stop.

Tools for the cleaning/maintenance: compressed air, soft brush and a non-synthetic clean, dry soft cloth.

DEVICE: Place the device into a stable, even surfaced place (it is recommended to put a soft cloth under the device), than remove the dust bag (see at **DUST BAG**). Wipe out the device external surface with the dry, soft cloth. Clean the device hard to reach parts e.g.: fan blades thought the security grid, switchers and joints with brush and compressed air. Turn the device upside down than clean the fan blades- and the hard to reach parts again with the brush and compressed air. Wipe out the device external surface again with the dry, soft cloth. Place back the clean and fully dry dust bag to the exhaust vent opening (see at **DUST BAG**). Turn back the device to its original position than adjust the dust bag position (see at **DUST BAG**). For the last step check the device correct operation (see at **OPERATION [3 - 6.]** chapters).

NOTICE! For tenacious contaminations, the device external surface and cushioned hand rest can be cleaned with soft, moist cloth, but pay attention that the device CANNOT have liquid in its inner parts or can be contacted with its switchers, joints, settings or Power cord (see at **Fig [05.]**)! At first put the cleaning material to the cloth, than start the surface cleaning. After the moist cleaning always wait for the device full dry and do not put it under it charge for at least 1-2min. Do not use solvent detergents!

DUST BAG: Place the device into a stable, even surfaced place (it is recommended to put a soft cloth under the device). Hold together the full dust bag neck to the closest to the exhaust vent. Carefully start to loosen the elastic band at the dust bag neck, than remove it from the exhaust vent. Hold still the dust bag with is neck than support it from below. Take the full bag to a suitable garbage bin, than turn it inside out and empty all the dust and contamination from it. Hand-wash the empty dust bag in a lukewarm, lightly detergent water, than wait for the dust bag full dry. **ATTENTION!** The dust bag can only be placed back to the exhaust vent (see at **Fig [03.]**) after its full dry. Before placing back the dust bag, clean the device (see at **DEVICE**). Turn the device upside down, than place it to a stable, even surfaced place. Carefully stretch out the dust bag elastic band to a slightly bigger size than the exhaust vent opening, than place the neck with the elastic band till the end of exhaust vent. **NOTICE:** Pay attention that the dust bag fully cover the exhaust vent opening.

If both dust bag use is required on the device, than at first place only one bag back, than the other one. After they are secure, adjust the bag bottoms into each other.

Turn back the device to its original position, than adjust the dust bag position between the device foot and the exhaust vent opening.

The emptying itself is NOT enough for the dust bag cleaning!
After each of the emptying, always wash out the dust bag according to the described above. Use the device only with fully dry dust bag!

If you notice lower capacity during in use or the device has less draught, check the dust bag saturation and if it is reasonable clean it according to the described above (see at **DUST BAG**).

In case of average frequency use, check the dust bag saturation at least once a week and if it is reasonable clean it according to the described above (see at **DUST BAG**).

In case of average frequency use, clean the device- and its accessories at least once a week according to the described above.

For future information about the device cleaning/maintenance visit our website: <http://www.nails.tv> or if it requires look for the place of purchase.

STORAGE

Always store the device and its accessories in a dry place, far from radiant heat in a clean state. Wind the power cord loosely together, pay attention not to break it.

Before the device operation always check the device- and its accessories just state.

SAFETY INSTRUCTIONS

- [1.] The device- and its accessories are only for indoor use, between 0~40°C [32~104°F]!
- [2.] Before the device operation always make sure the device- and its accessories just state.
- [3.] The device cannot be left behind without supervision when it is turned on.
- [4.] Use/store the device only in stable, even surfaced places. Do not put the device into places where it can be knocked down or may fall off and unauthorized persons can reach it.
- [5.] The device CANNOT have any liquid inside in it or in its switcher, openings or sockets as well as CANNOT be contacted with it Power cord (see at **Fig [05.]**)!
- [6.] DO NOT ever touch the device- or its accessories or Power cord with wet/moist hands, even if the device is turned off or it is in an annealed state.
- [7.] DO NOT ever operate the device if any part of it are damaged- or had any kind of accident or fell into water! Take the device into the place of purchase for repair and seek for professional help.
- [8.] Only authorized personals can repair the device- and its accessories.
- [9.] DO NOT allow any kind of irrelevant object thought the device openings, socket as well as to its exhaust vent (e.g.: nails, nail form, file...etc.)!
- [10.] Use/store the device in a dry place far from radiant heat, in a clean environment. Avoid moist/wet and contaminated places.
- [11.] The device and its parts may have electric charges in them even when it is turned off. After the device use is finished, always turn off and anneal the device (see at **OPERATION [7.]** chapter).

For more information about the device, visit our website: <http://www.crystalnails.com> or look for the place of purchase.

NOTICE!

If any case of malfunction was found or any parts- or accessories of the device has to be replaced/repared, please look for the place of purchase.

ELITE COSMETIX LTD.; Jozsef Krt. 44., H-1085 Budapest, Hungary.

[EN] XTREME STRONG DUST COLLECTOR [HU] XTREME STRONG PORELSZÍVÓ [RO] ASPIRATOR DE PRAF XTREME STRONG [DE] XTREME STRONG NAGEL STAUBABSAUGER [FR] ASPIRATEUR À POUSSIÈRE XTREME STRONG [IT] ASPIRATORE PER UNGHIE XTREME STRONG [ES] ASPIRADOR DE POLVO XTREME STRONG