

LEDexpress

UVLED Lamp

MANUAL GUIDE

PLEASE READ ALL THE SAFETY INSTRUCTIONS BEFORE THE DEVICE OPERATION.
KEEP THIS MANUAL GUIDE SAFE FOR FUTURE REFERENCE.

PRODUCT INTRODUCTION

The LEDexpress UVLED Lamp is used for the LED light curing artificial nail substances consolidation. The LEDexpress UVLED Lamp is an easy to use, lightweight equipment. Because of its shape and large power it is perfectly suitable for both hand and feet use. The device is provided with Motion sensor On/Off switcher, Timer function and 18pcs large power LED bulbs for the high level of professional work.

SPECIFICATION:


Input: AC100-240V, 50/60Hz, 0.5A
Output: DC12V, 1.5A
Power: 36W±10%
Measures: 210*120*80mm
Weight: 217.75g±10%

ACCESSORIES:

AC/DC Adapter

THE LEDEXPRESS UVLED LAMP PARTS:

- [01.] LEDexpress UVLED Lamp
- [02.] On/Off Switch- and Timer [30sec, 60sec]
- [03.] LED bulbs [18pcs]
- [04.] 2side Motion sensor switcher- and Timer [100sec]
- [05.] AC/DC Adapter connector

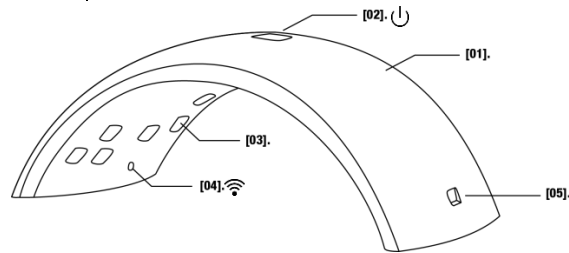

OPERATION

ATTENTION! Before the device operation, always check the device and its accessories just state. Pay attention that do not touch the device LED bulbs with anything during in use. [e.g.: skin, nails- or other professional items/accessories/materials].

- [1.] Unpack the device and its accessories from the packaging then select a stable-, horizontal-, even surfaced place for the device use.
 - [2.] Connect the device AC/DC Adapter to the outlet, than into the device [05.] AC/DC Adapter connector [see at the picture].
 - [3.] The LEDexpress UVLED Lamp On/Off switch and Timed use:
 - [3.1.] With [02.] On/Off Switch- and Timer use: Push the [02.] On/Off Switch- and Timer on the top of the device (see at the picture). With one push 30sec [30S], with two push 60sec [60S] timed use can be achieved. With a third push the device will automatically turn off. **Notice:** At the end of the timed use the device will automatically turn down without a sound indication. To restart the operation, push again the [02.] On/Off Switch- and Timer at the top of the device. **Notice:** During the [02.] On/Off Switch- and Timer use, the [04.] Motion sensor function will not operate [see more at the [3.2.] chapter].
 - [3.2.] With [04.] Motion sensor use: In case of use on customers, place the hand- or feet into the device total length. With this move the device will automatically turn on. In case of use without customer, place an at least 1-1.5cm [0.39-0.59in] high, non-transparent item in front of one of the [04.] Motion sensor switchers on the sides [see at the picture] and let it still. With this move the device will automatically turn on. With the [04.] Motion sensor use, the device will operate in 100sec [1min40sec] timed use without an operation break. **Notice:** At the end of the timed use the device will automatically turn down without a sound indication. For the device operation stop/break, move out the hand/feet or the item from the [04.] Motion sensor range. For the operation restart place back the hand/feet or the item into the [04.] Motion sensor range. The timer will automatically run from the 100sec count down with every restart. **Notice:** During in the [04.] Motion sensor use, the [02.] On/Off Switch- and Timer function will not operate [see more at the [3.1.] chapter].
- Notice:** For switching between the two On/Off function, wait for the device shout down or turn it off, than operate the device according to the **OPERATION** [3.1.] or [3.2.] chapters.
- [4.] After the device use is finished, turn it off according to the [3.1.] or [3.2.] chapters, than pull out the AC/DC Adapter from the device [05.] Adapter connector than from the outlet as well.

Attention! If the applied material causes burning sensation on the nails [it depends on the material and the person sensitivity] than use the device with breaks or temporary discontinue the device use.

[EN] LEDEXPRESS UVLED LAMP [HU] LEDEXPRESS UVLED LÁMPA [RO] LAMPĂ UVLED LEDEXPRESS [DE] LEDEXPRESS UVLED LAMPE [FR] LAMPE UVLED LEDEXPRESS [IT] LAMPADA UVLED LEDEXPRESS [ES] LAMPARA UVLED LEDEXPRESS

ICON INTRODUCTION:



LED light source



2in1 LED light source with "Cure All" ability. It cures all the LED light setting artificial nails.



Motion sensor On/Off switcher- and Timer [100mp]



Large Power [36W±10%]

OTHER ICONS:



Light „Feather” weight



AC/DC Adapter

CLEANING/MAINTENANCE

ATTENTION! Do not disable the device! The device do not requires inner cleaning/maintenance! Before the cleaning/maintenance always make sure the device annealed state [turn off the device, than remove the AC/DC Adapter from the device than from the outlet]. Only proceed with the cleaning/maintenance after the device- and the LED bulbs full cool down!
It is recommended to wear gloves during in the procedure.

Tools for the cleaning/maintenance: Compressed Air, Brush and a Non-synthetic soft, clean dry cloth.
Place the device into a stable, even surfaced place [it is recommended to put a soft cloth under the device]. Wipe out the external- and inner panel with a soft, dry cloth. Turn the device upside down, than clean the inner plastic panel, the settings and the LED bulbs with brush and compressed air [see at the picture [03.] - [04.]]. Wipe out the inner panel again with the soft, dry cloth. Turn back the device into its original position than clean the device external surface, the [02.] On/Off Switch- and Timer [05.] AC/DC Adapter connector (see at the picture [02.] and [05.]) and the joints with brush and compressed air. For the last step wipe out the device external panel with the soft, dry cloth, than check the device proper functioning.

Notice! For tenacious contaminations, the device external- and inner cover panel can be cleaned with soft, moist cloth, but pay attention that liquid cannot become contacted with the device inner parts or with its switchers, joints, settings, LED bulbs or whit its [05.] AC/DC Adapter connector. At first put the cleaning material into the cloth, than start the surface cleaning. After the moist cleaning, do not put the device under it charge at least 1-2min and always wait for its full dry. Do not use solvent detergents!

In case of average frequency use, clean the device- and its accessories at least once a week according to the described above.
If it requires look for the place of purchase.

STORAGE

Store the device and its accessories always in a dry place, far from radiant heat in a clean state.
Wind the AC/DC Adapter cord loosely together and pay attention not to break it.

Before the device operation always check the device and its accessories just state.

SAFETY CAUTIONS

- [1.] Only for indoor use, between 0~40°C [32~104°F]!
- [2.] Before the device operation always make sure the device and its accessories just state.
- [3.] The device cannot be left behind without supervision when it is turned on.
- [4.] Use/store the device only in stable, even surfaced places. Do not put the device into places where it can be knocked down or may fall off.
- [5.] The device or its accessories cannot become contact with liquids.
- [6.] Do not ever touch the device- or its accessories with wet/moist hands, even if the device is turned off or in annealed state.
- [7.] Do not ever operate the device if any parts of it are damaged or had any kind of accident or fell into water! Take the device into the place of purchase for repair and seek for professional help.
- [8.] Only authorized personals can repair the device- or its accessories.
- [9.] Use/store the device in a dry place far from radiant heat, in a clean environment. Avoid moist/wet and contaminated places.
- [10.] Do not touch the device LED bulbs with anything e.g.: skin, nails or other professional items/accessories/materials or water/cleaning supplies. Otherwise the LED bulbs can be damaged and can cause harm to their performance, therefore the device lifetime will be drastically reduced.
- [11.] Do not ever look directly into the device light source during in operation, as well as Do not let the skin to be exposed excessive amount LED radiation.
- [12.] The device and its parts may have electric charges in them even when it is turned off. After the device use is finished, always anneal it [turn it off according to the **OPERATION** [3.1.] or [3.2.] chapters, than pull out the AC/DC Adapter from the device [05.] Adapter connector than from the outlet as well].

For more information about the device, visit our website: <http://www.crystallnails.com> or look for the place of purchase.

NOTICE!

If any case of malfunction was found or any parts of the device has to be replaced/repared, please look for the place of purchase.

Elite Cosmetics LTD.; Jozsef Krt. 44., H-1085 Budapest, Hungary