

CRYSTAL LAMP H-M/2.2

MANUAL GUIDE

PLEASE READ ALL THE SAFETY INSTRUCTIONS BEFORE THE DEVICE OPERATION.
KEEP THE MANUAL GUIDE SAFE FOR FUTURE REFERENCE.

All color variations of the CRYSTAL LAMP H-M/2.2 has the same technical specification, operation-, maintenance and safety instructions.

PRODUCT INTRODUCTION


A CRYSTAL LAMP H-M/2.2 UV Lamp is used for the UV- and LEDUV light curing artificial nail materials consolidation. The CRYSTAL LAMP H-M/2.2 UV Lamp is the developed version of the popular CRYSTAL UV Lamp. The device is provided with special plastic socket UV bulbs and secured power cord setting for the high level of professional work. The device has digital display, timer, fan, 360° inner mirror surface and removable hand tray.

SPECIFICATION:

UV classifications: UV Type 3 [365nm]
Input: 220-240V, 50Hz
Power [W]: 36W±10%
Amperage [A]: 1.0A / Fuse: 2.0A
[change only in annealed state]
Measure [mm]: 285*240*105mm
Weight [g]: 1915g
ACCESSORIES:
4pcs UV bulb [9W, 365nm, plastic socket type]

CRYSTAL LAMP H-M/2.2 PARTS:

- [1.] A CRYSTAL LAMP H-M/2.2 UV Lamp
- [2.] Fan opening and UV bulbs
- [3.] Hand tray [removable]
- [4.] Control panel and Digital display
- [5.] Fan air gate
- [6.] ON/OFF „I/O“ Switcher
- [7.] Power cord

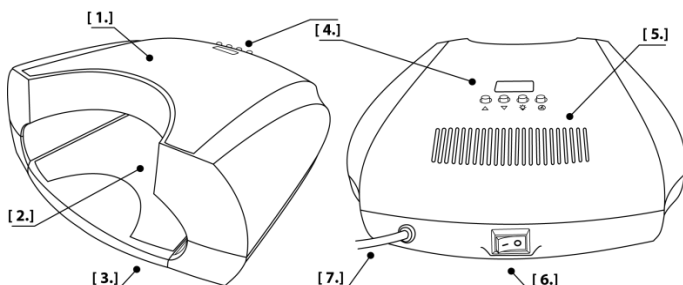

[4.] CONTROL PANEL:

- △ - Time increase button [+5sec]
- ▽ - Time decrease button [-5sec]
- ☀ - Light ON/OFF Switcher
- ⚙ - Fan ON/OFF Switcher

OPERATION

ATTENTION! Always check the device and its accessories just state before the device operation. Do not to touch the device light bulbs with anything during in operation [e.g.: skin, nails or other professional accessories/items or materials].

As well as do not let any irrelevant object thought the device openings, joints or sockets.

- [1.] Unpack the device and its accessories from the packaging then select a stable, even surfaced place for the device use.
- [2.] Connect the device [7.] Power cord to the outlet.
- [3.] Turn on the device with the [6.] ON/OFF „I/O“ Switcher at the back of the lamp. **Notice!** The switch on will be indicated with a short beep sound.
- [4.] Adjust the desired operation time with the [4.] Control panel △ Time increase [+5sec] and ▽ Time decrease [-5mp] buttons. The device is operating between 60sec and 900sec [15min]. **HINT:** With the timer buttons [△▽] continuous press, quick time setting will be available. If the ▽ Time decrease button is pressed from the base time [60sec], then the timer will jump automatically to the 900sec [15min] usage. **Notice!** The end of the operation time will be indicated with a short beep sound.
- [5.] For the operation start/stop press the ☀ Light ON/OFF Switcher at the [4.] Control panel. If it requires use the fan function with the ⚙ Fan ON/OFF Switcher at the [4.] Control panel. **Attention!** Do not cover or place anything in front of the device [5.] Fan air gate during in the device operation. Pay attention to protect it from dust, contamination and liquids.
- [6.] When the device use is finished, stop the operation with the ☀ Light ON/OFF Switcher on the [4.] Control panel, then turn it down with the [6.] ON/OFF „I/O“ Switcher at the back of the lamp, then pull out the [7.] Power cord from the outlet.

Notice! If the applied material causes burning sensation on the nails [it depends on the material and the person sensitivity] than use the device with breaks or temporary discontinue the device use.

UV BULB CHANGE

ATTENTION! Before the UV bulb change always make sure the device annealed state [turn off the device, then remove the power cord from the outlet]. Always proceed with the UV bulb change after the bulbs and the device full cool down!
It is recommended to wear gloves during in the UV bulb change.

Place the device into a stable, even surfaced place [it is recommended to put a soft cloth under the device]. Turn the device upside down than remove the [3.] Hand tray. Careful linear movements pull out the bulbs from their settings. At first remove the ones below, than the ones on the sides [proceed with outside to inside]. Clean the bulb settings, the surrounding area and the fan opening as well [see **CLEANING/MAINTENANCE**]. Place in the new bulbs until they click. At first place the side ones than the ones below [proceed with inside to outside]. The correctly placed bulbs cannot be loose or wobble in their settings. Pay attention to use only the right type of plastic socket UV bulbs [UV-9W-L 365nm]. Place back the [3.] Hand tray [see **CLEANING/MAINTENANCE**], than turn back the device to its original position. Finally check the device and the bulbs correct functioning.

ATTENTION! The device can only be operated with plastic socket bulbs.

[EN] CRYSTAL LAMP H-M/2.2 UV LAMP [HU] CRYSTAL LAMP H-M/2.2 UV LÁMPA [RO] LAMPĂ UV CRYSTAL LAMP H-M/2.2
[DE] CRYSTAL LAMP H-M/2.2 UV LAMPE [FR] LAMPE UV CRYSTAL LAMP H-M/2.2
[IT] LAMPADA UV CRYSTAL LAMP H-M/2.2 [ES] LAMPARA UV CRYSTAL LAMP H-M/2.2

If you notice lower capacity during in operation, check the bulbs proper functioning and if it necessary, replace them according to the described above [see **UV BULB CHANGE**].

If the device is not operating properly after the bulb change, check the bulbs correct placing [see **UV BULB CHANGE**]. If the problem is still standing, take the device to the place of purchase and seek professional help.

If the bulb change causes difficulties, take the device to the place of purchase and seek for professional help.

In case of average frequency use, check the light bulbs correct operation at least once a month and if it requires replace them according to the described above [see **UV BULB CHANGE**].

CLEANING/MAINTENANCE

ATTENTION! Before the cleaning/maintenance always make sure the device annealed state [turn off the device, than remove the power cord from the outlet]. Always proceed with the cleaning/maintenance after the device- and the light bulbs full cool down!
It is recommended to wear gloves or/and protection during in the procedure.

For the device and its accessories cleaning/maintenance use: compressed air, brush and non-synthetic, soft, dry cloth.

Place the device into a stable, even surfaced place [it is recommended to put a soft cloth under the device]. Wipe the external- and inner panel with a soft, dry cloth. Turn the device upside down then remove the [3.] Hand tray and the UV bulbs [see **UV BULB CHANGE**]. Clean the bulb settings-, the fan opening and the inner panel with compressed air and brush. Wipe out the inner panel with the soft, dry cloth then place back the UV bulbs [see **UV BULB CHANGE**] than the [3.] Hand tray. Pay attention to place back correctly the [3.] Hand tray on the both sides of the guiderails. Turn back the device to its original position than clean the hard to reach parts as well (e.g.: see Picture [4.]- [7.]) and joints with compress air and bush.

For the last step wipe out the device external panel with the soft, dry cloth.

Attention! For tenacious contaminations, the device external panel and [3.] Hand tray can be cleaned with lightly moist soft cloth, but pay attention that the device cannot have liquid inside in it or in its switcher, joints or become contacted with the device [7.] Power cord. After the moist cleaning, do not put the device under it charge at least 1-2min and always wait for its full dry. Do not use solvent detergents!

In case of average frequency use, clean the device and its accessories at least once a week according to the described above.

For more information about the device cleaning/maintenance or UV bulb change visit our website: <http://www.nails.tv> or look for the place of purchase.

STORAGE

Store the device and its accessories always in a dry place, far from radiant heat in a clean state.
Wind the [7.] Power cord loosely together, pay attention no to break it.

Before the device operation always make sure the device and its accessories just state.

SAFETY CAUTIONS

- [1.] Only for indoor use, between 0~40°C [32~104°F]!
- [2.] Before the device operation always make sure the device and its accessories just state.
- [3.] The device cannot be left behind without supervision when it is turned on.
- [4.] Use/store the device only in stable, even surfaced places. Do not put the device into places where it can be knocked down or may fall off.
- [5.] Do not lift or move the device by only its [3.] Hand tray. Always hold the device secure with two hands.
- [6.] The device or its accessories cannot become contact with liquids.
- [7.] Do not ever touch the device- or its accessories with wet/moist hands.
- [8.] Do not ever operate the device if any parts of it are damaged or had any kind of accident or fell into water! Take the device into the place of purchase and seek for professional help.
- [9.] Only authorized personals can repair the device- or its accessories.
- [10.] Use/store the device far from radiant heat, in a clean environment. Avoid moist/wet and contaminated places.
- [11.] Do not cover- or place anything into the device [5.] Fan air-gate during in operation. As well as pay attention to keep it far from dust, contaminations and moisture.
- [12.] Do not let any irrelevant objects thought the device openings, joints or sockets.
- [13.] Do not touch the device light bulbs with anything during in operation [skin, nails or other professional accessories/items or materials].
- [14.] Do not ever look directly into the device light source during in operation, as well as DO NOT let the skin to be exposed excessive amount UV radiation.
- [15.] The device can only be operated with plastic socket bulbs!
- [16.] The device can have electric charges in it even if it is turned off. After the device use is finished, always anneal it [turn off the device [6.] than remove the [7.] Power cord from the outlet].

For more information about the device, visit our website: <http://www.crystallnails.com> or look for the place of purchase.

NOTICE!

If any case of malfunction was found or any parts of the device has to be replaced/repared, please look for the place of purchase.

Importer: Elite Cosmetics LTD.; Jozsef Krt. 44., H-1085 Budapest, Hungary