
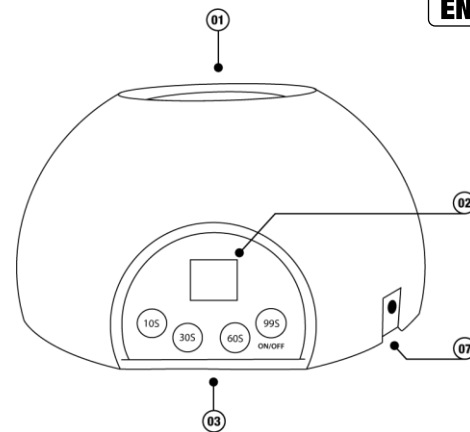


LEDExtreme MINI

UVLED Lamp

MANUAL GUIDE

PLEASE READ ALL THE SAFETY INSTRUCTIONS BEFORE THE DEVICE OPERATION. KEEP THIS MANUAL GUIDE SAFE FOR FUTURE REFERENCE.

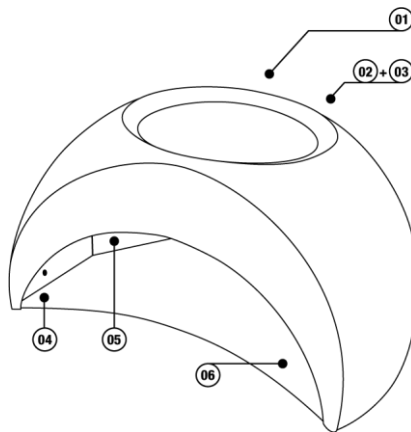

EN

PRODUCT INTRODUCTION:

The LEDEXTREME MINI UVLED Lamp is used for the UV- and UVLED light curing artificial nail materials consolidation. The LEDEXTREME MINI UVLED Lamp is our first UVLED type lamp to have a built-in automatic fan function. The silent fan cools the UVLED bulbs, thus the bulbs life time increasing and also the warm feeling on the guest hands is decreasing. Last but not least, it is also an excellent help with consolidating the air-drying materials. With its inner mirror surface the materials fast and safe setting is guaranteed, as well as with its easy to remove magnetic bottom the pedicure and maintenance are not a question either. What else does it know? Digital display on the back, motion sensor function, 4 types timer function, touch buttons and a reliable performance. Thus, it enchants us not only with its sleek, pretty little look, but also with its practical functions. With its small size and practical features, the fast, efficient work is not an issue.

SPECIFICATION:

- o UV classification: UV Type 3 [365+405nm]
- o Input: AC 100-240V~; 50/60Hz; 0.8A
- o Output: DC 24V~; 1.0A
- o Power: max. 36W±10%
- o Measure: 147*185*87mm
- o Weight: 529g±10%

ACCESSORIES:

- o 1pc AC Adapter

PARTS OF THE DEVICE (see at pictures):

- 01 Fan with security grid.
- 02 Digital display.
- 03 Timer- and Control buttons (10/30/60/99S - ON/OFF).
- 04 Motion sensor.
- 05 UVLED bulbs (21pcs).
- 06 Magnetic bottom plate.
- 07 AC Adapter socket.

OPERATION

ATTENTION! Before the device operation, always check the device and its accessories just state.

Pay attention not to touch the device UVLED bulbs with anything during in use. [e.g.: skin, nails- or other professional items/accessories/materials].

[01.] Unpack the device and its accessories from the packaging then select a stable, horizontal-, even surfaced place for the device use.

[02.] The device is suitable for hand-/feet and without customer use. If its necessary, remove the device Bottom plate (see at pic. 06).

[03.] Connect the device AC Adapter to the outlet, than to the device socket (see at pic. 07).

Notice: During the device install the device Digital display will turn on automatically (see at pic. 02), indicated by the display flashing and a short sound notice.

[04.] Select the desired operation mode as following:

- o **Default setting:** After the device install, the device will run on 30S (3sec) timed use automatically without the Control buttons touch (see at pic. 02). About the operation start, see more at the **Use with motion sensor** chapter below.

- o **Use with motion sensor: 10S, 30S, 60S (10/30/60sec) timed use.**

Select the desired operation time with the Timer buttons short press on the device back (see at pic. 03). During the time setting the adjusted time will be indicated by a short sound and the selected operation time will be indicated on the Digital display (see at pic. 02). The display will count backwards. For the operation start place the hand-/feet or at least 1.5cm tall, non-transparent item between the Motion sensors range (see at pic. 04). After the device switch on the Fan and UVLED bulbs will automatically switch on (see at pic. 01 and 05). For the operation stop remove the hand-/feet or item from the Motion sensors range. During the stop the Fan and the UVLED bulbs will automatically switch off. After every operation stop, the previously adjusted operation time will run from the start. For the device restart place in the hand-/feet or item between the Motion sensors range again (see at pic. 04). **Notice:** after the operation time end the device will turn off automatically without a sound indication and will remain in stand by state.

- o **Use without motion sensor: 99S "ON/OFF" continues timed use.**

With the 99S "ON/OFF" Timer button short press (see at pic. 03), the device will turn on automatically and will operate in continues mode till the end of the 99sec or the operation break. The 99sec operation time will be indicated in the Digital display and it will count forward (see at pic. 02). The Fan and the UVLED bulbs will be automatically turn on during the device switch on. With this operation mode use, the Motion sensors will be out of operation (see at pic. 04). Therefore, the hand-/feet or item can be moved in- and out within the device without operation break. For the operation restart or break, press the 99S - ON/OFF timer button again. After every operation break, the operation time will run from the start again. **Notice:** At the end of the operation time the device will automatically turn off without a sound indication and will remain in stand by state.

Notice: The operation times and modes can be changed during operation as well.

Attention! If the device become over heated during in use, stop the device operation for at least 15min. If the applied material causes burning sensation on the nails [it depends on the material and the person sensitivity] than use the device with breaks or temporary discontinue the device use.

[05.] After the device use finished turn it off and anneal it as following:

- o Turn off the device according to the actual mode use as it described in the [04.] chapter.
- o Then remove the AC Adapter from the device back (see at pic. 07), than from the outlet as well.

CLEANING/MAINTENANCE

ATTENTION! Before the cleaning/maintenance always make sure the device annealed state [see at OPERATION [05.] chapter]. Only proceed with the cleaning/maintenance after the device- and the UVLED bulbs full cool down. Pay attention to do not touch the device UVLED bulbs with anything during the process [e.g.: skin, nails- or other professional items/accessories/materials]. It is recommended to wear gloves during in the procedure.

Tools for the cleaning/maintenance: compressed air, brush and a non-synthetic soft, clean dry cloth.

Place the device into a stable, even surfaced place [it is recommended to put a soft cloth under the device]. Turn the device upside down, then remove its Bottom plate with a vertical move. Wipe the removed Bottom plate and the device inner- and external surface with a dry, soft cloth. For the inner mirror surface and the Fan (see at pic. 01) hard to reach parts cleaning, use brush and compressed air. Wipe out again the device inner- and external surface with the soft, dry cloth, then place back the Bottom plate to the device bottom. Pay attention that the bottom plate feet should be facing outwards from the device inside. For the last step check the device correct operation according to the OPERATION [03.] - [04.] chapters described.

Notice: In case of stubborn contamination, the device external- and Bottom panel (see at pic. 06), can be cleaned with soft, moist cloth, but pay attention, liquids cannot contact with the device inner parts, joints, openings or can be contacted with the device Fan, Motion sensors, UVLED bulbs or its AC Adapter socket (see at pic. 01 04 05 07). Otherwise it can cause damage to the device. At first place the cleaning material into the cloth, then start the surface cleaning. After the moist cleaning, do not put the device under in charge for at least 1-2min and always wait for its full dry. Do not use solvent detergents! **In case of average frequency use, clean the device- and its accessories according to the described above at least once a week.**

STORAGE

Store the device and its accessories always in a dry indoor place, far from radiant heat in a clean state. Wind the AC Adapter cord loosely together while pay attention not to break it.

Before the device operation always check the device and its accessories just state.

SAFETY CAUTIONS

[1.] The device and its accessories are only for indoor use, between 0-40°C [32-104°F].

[2.] The device cannot be used by individuals under age 18.

[3.] Before the device operation always check the device and its accessories just state. Operate the device only with its original accessories.

[4.] The device cannot be left without supervision when it is turned on, and children cannot be present during the device operation.

[5.] Use/store the device only in stable, even surfaced places. Do not put the device into places where it can be knocked down or may fall off or unauthorized persons can reach it.

[6.] Do not move or lift the device by its Bottom panel (see at pic. 06). Always hold the device stable with both hands.

[7.] Do not cover the device openings or use the device as a hand rest during in operation.

[8.] The device or its accessories cannot become contact with liquids.

[9.] Do not ever touch the device- or its accessories with wet/moist hands, even if the device is turned off or is in an unplugged state.

[10.] Do not ever operate the device if any parts of it damaged or had any kind of accident or fell into water! Take the device into the place of purchase and ask for professional help.

[11.] Only authorized persons can repair the device- or its accessories: **Flite Cosmetix Ltd., Repair service (Jozsef Krt. 44, Budapest H-1065)**

[12.] Use/store the device only in dry places far from radiant heat, in a clean environment. Avoid moist/wet and contaminated places.

[13.] Do not touch the device UVLED bulbs with anything (see at pic. 05) e.g.: skin, nails or other professional items/accessories/materials or water/cleaning supplies. Otherwise the UVLED bulbs may suffer damage what will cause decline to their performance and will reduce the device lifetime.

[14.] Do not ever look directly into the device light source during in operation (see at pic. 05), as well as do not let the skin to be exposed excessive amount UV radiation. Otherwise, it may cause eye- or skin damage or can suffer premature skin ageing.

[15.] Some drugs- and cosmetics can increase the sensitivity to the UV radiation. Before the device use remove all cosmetics from the skin surface and make sure do not take- or use any product or medication what can cause- or increase the UV radiation sensitivity.

[16.] Do not use the device on individuals whom has highly sensitive skin- or has freckle tendencies or suffered from skin cancer before.

[17.] The device and its accessories may have electric charges in them even when they turned off. After the device use is finished, always anneal it according to the OPERATION [05.] chapter.

For more information about the device visit our website: <http://www.crystallnails.com> or look for the place of purchase.

NOTICE!

If any case of malfunction was found or any parts of the device has to be replaced/repared, please look for the place of purchase.

ELITE COSMETIX LTD.; Jozsef Krt. 44., H-1085 Budapest, Hungary

[EN] LEDEXTREME MINI UVLED LAMP [HU] LEDEXTREME MINI UVLED LÁMPA [RO] LAMPĂ UVLED LEDEXTREME MINI [DE] LEDEXTREME MINI UVLED LAMPE [FR] LAMPE UVLED LEDEXTREME MINI [IT] LAMPADA UVLED LEDEXTREME MINI [ES] LAMPARA UVLED LEDEXTREME MINI