

TUNNEL UV LAMP H-M/1

- MANUAL GUIDE -

PLEASE READ ALL THE SAFETY INSTRUCTIONS THOUGHTFULLY BEFORE THE DEVICE OPERATION. KEEP THIS MANUAL GUIDE SAFELY FOR FUTURE REFERENCE.

PRODUCT INTRODUCTION

The TUNNEL UV Lamp H-M/1 is used for the UV- and LEDUV light curing artificial nail substances consolidation.

SPECIFICATIONS


Input: 220-240V, 50Hz
Power (W): 36W±10%
Amperage: 1.0A
Weight: 1435g
Measure: 258*220*125mm
UV Classification: UV Type 3 (365nm)

CONTROL BUTTONS

1. On/Off (I/O) Switcher
2. Start button
3. Timer (3 mode: 120sec=2min, 0=continuous, 90sec=1.5min)
4. Fuse (replace only annealed state!)

ACCESSORIES

- 4pcs UV bulb (9W, 365nm, plastic socket type)

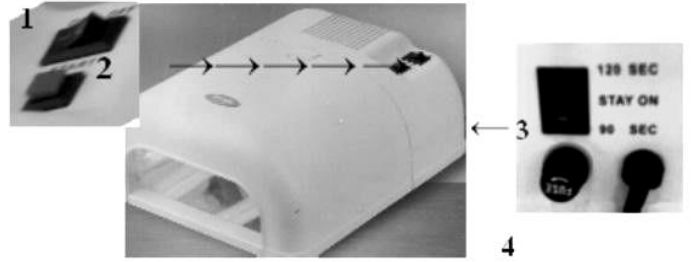

SAFETY CAUTIONS

- [1.] Only for indoor use, between 0~40°C [32~104°F]!
- [2.] Before the device operation always make sure the device and its accessories just state.
- [3.] The device cannot be left behind without supervision when it is turned on.
- [4.] Use/store the device only in stable, even surfaced places. Do not put the device into places where it can be knocked down or may fall off.
- [5.] Do not lift or move the device by only its Hand tray. Always hold the device secure with two hands.
- [6.] The device or its accessories cannot become contact with liquids.
- [7.] Do not ever touch the device- or its accessories with wet/moist hands.
- [8.] Do not ever operate the device if any parts of it are damaged or had any kind of accident or fell into water! Take the device into the place of purchase and seek for professional help.
- [9.] Only authorized personals can repair the device- or its accessories.
- [10.] Use/store the device far from radiant heat, in a clean environment. Avoid moist/wet and contaminated places.
- [11.] Do not cover- or place anything into the device Fan air-gate during in operation. As well as pay attention to keep it far from dust, contaminations and moisture.
- [12.] Do not let any irrelevant objects thought the device openings, joints or sockets.
- [13.] Do not touch the device light bulbs with anything during in operation [skin, nails or other professional accessories/items or materials].
- [14.] Do not ever look directly into the device light source during in operation, as well as DO NOT let the skin to be exposed excessive amount UV radiation.
- [15.] The device can only be operated with plastic socket bulbs!
- [16.] The device can have electric charges in it even if it is turned off. After the device use is finished, always anneal it [turn off the device than remove the Power cord from the outlet].

OPERATION

ATTENTION! Before the device operation, always check the device and its accessories just state.

- [1.] Unpack the device from the packaging.
- [2.] Choose a stable, even surfaced place for the device usage.
- [3.] After the device setting, plug the power cord into the outlet.
- [4.] Turn on the device with the I/O (On/Off) switcher at the back of the machine.
- [5.] Adjust the desired operation time with the Timer Button (3): 120sec (2min) ; 0 (continuous) and 90sec (1.5min) at the back of the device. Now the TUNNEL UV Lamp H-M/1 is ready for use.
- [6.] For the device operation, press the „START” Start/Stop button at the top of the device. The operation will not start until the “START” Start/Stop button is not pressed. To Stop the device during in operation press the „START” Start/Stop button.
- [7.] For the Time change during in operation, set the switcher at the back of the device in „O” (Off) position, then select the desired operation time and wait at least 30second for the restart. After 30sec, set the I/O (On/Off) switcher at the back of the device in „I” (On) position, then press the „START” Start/Stop button at the top of the device.
- [8.] After the work is finished with the device, turn it off with the I/O (On/Off) switcher at the back, than pull out the power cord from the outlet.

ATTENTION! Pay attention NOT to touch the device light bulbs during in operation with anything [e.g.: skin, nails or other professional accessories/items or materials]. As well as do not let any irrelevant object thought the device openings, joints or sockets.

Notice! If the applied material causes burning sensation on the nails [it depends on the material and the person sensitivity] than use the device with breaks or temporary discontinue the device use.

BULB CHANGE

ATTENTION! Before the UV bulb change always anneal the device (turn off the machine, than remove the power cord from the AC outlet), as well as wait for the device- and the bulbs full cool down! It is recommended to wear gloves during in the UV bulb change procedure.

Put the device into an even surfaced stable place (it is recommended to put a cloth under the device), than move off the hand tray. Pull out the used UV bulbs with a careful certain move, than clean the bulb settings and the surrounding area with brush and compressed air. Place into the new bulbs until they click. If the UV bulbs placed in correctly, they cannot be loose or wobble in their places. Pay attention to use only original and right type of plastic socket UV bulbs (UV- 9W-L 365nm) in the device. Place back the hand tray (see at **MAINTENANCE/CLEANING** chapter), than turn back the device to its original position.

For the last step, check the device and the bulbs proper operation.

ATTENTION! The device can only be operated with plastic socket bulbs.

If you notice low efficacy during in use check the bulb proper functioning and if it reasonable, replace it according to the described above (see **BULB CHANGE** chapter).

In the case of the device is not operate properly after the bulb change, check the tube if its correctly placed (see **BULB CHANGE** chapter) and the type of the tube (UV- 9W-L 365nm). If the problem is still standing, anneal the device and take it to the place of purchase and ask for professional help.

If the UV tube change causes difficulty, than take the device to the place of purchase and ask for professional help.

In case of average frequency use, check the UV bulbs proper functioning at least once a month and if it is reasonable, replace them according to the described above (see **BULB CHANGE** chapter).

MAINTENANCE/CLEANING

ATTENTION! Before cleaning/maintenance always anneal the device (turn off the machine, than remove the power cord from the AC outlet), as well as wait for the device- and the light bulbs full cool down! It is recommended to wear gloves during in cleaning/maintenance procedure.

For the TUNNEL UV Lamp H-M/1 cleaning/maintenance use compressed air, brush and a non-synthetic soft towel. Put the device into a stable, even surfaced place (it is recommended to put a cloth under the device), than wipe out the external panel with a soft dry cloth. Turn the device upside down than move off the hand tray. Clean the hand tray with brush, compressed air and with a soft dry cloth. Remove the UV bulbs (see at **BULB CHANGE** chapter) than clean their places and the fan opening as well as the inner part of the device with brush and compressed air. Place back the UV bulbs (see at **BULB CHANGE** chapter) and the hand tray as well. Pay attention to place the hand tray correctly back to its place, it has to be fit correctly on the guide rails on both sides. Turn back the device to its original position, than clean the hard to reach parts (switchers, joints, settings, fan vents) with brush and compressed air. For the last step, wipe out the machine external panel with a dry, soft cloth.

NOTICE: If it requires the device external panel and hand tray can be cleaned with a lightly moist, soft cloth, but pay attention that the device CANNOT have any liquid inside in it or in its switchers, openings or joints as well as CANNOT be contacted with the device power cord, bulb settings, or the fan openings. After the moist cleaning, always wait for the device full dry as well as do not put under it charge at least 1-2 min.! DO NOT use solvent detergents!

In case of average frequency use, clean the device and its parts/accessories at least once a week according to the described above.

For future information about the device cleaning/maintenance or bulb change visit our website: <http://www.nails.tv> or if it requires look for the place of purchase.

STORAGE

Store the device always in a dry place, far from radiant heat in a clean state. Wind the power cable loosely together while pay attention not to refract it.

Before the device operation always make sure the device and its accessories just state.

For more information about the device, visit our website: <http://www.crystalnails.com> or look for the place of purchase.

NOTICE!

If any case of malfunction was found or any parts of the device has to be replaced/repared, please look for the place of purchase.

Importer: Elite Cosmetix LTD.; Jozsef Krt. 44., H-1085 Budapest, Hungary

[EN] TUNNEL UV LAMP H-M/1 [HU] ALAGÚT UV LÁMPA H-M/1 [RO] LAMPĂ UV TUNNEL H-M/1 [DE] TUNNEL UV LAMPE H-M/1 [FR] LAMPE UV TUNNEL H-M/1 [IT] LAMPADA UV TUNNEL H-M/1 [ES] LAMPARA UV TUNNEL H-M/1